


Installing the Pro-Trim Capping System

• Cut & Install "L" Caps around window.


2 Methods:

Pro-Tip – pinch all corners to get the best fit.


Accurately cut and fit "L" Caps all around window. Flash where necessary.

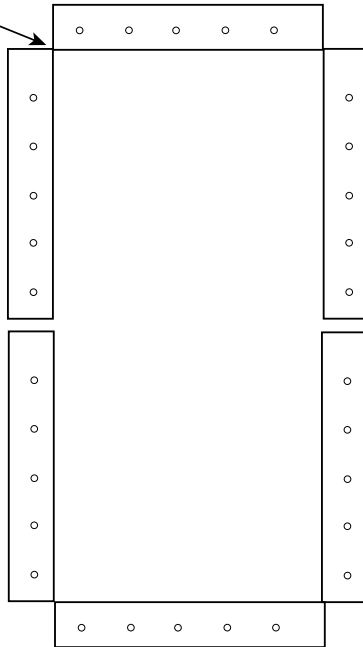


Using chopper saw, cut and press fit all 4 face cap sides.

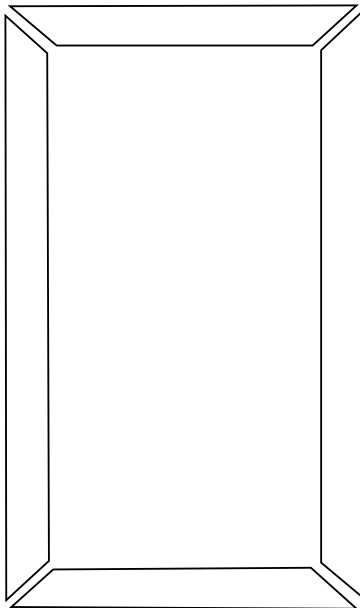


OR...

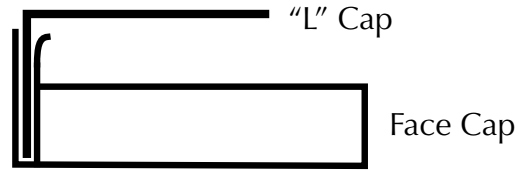

This open at the seams method assures a perfect fit. It's easier. Flash where necessary.

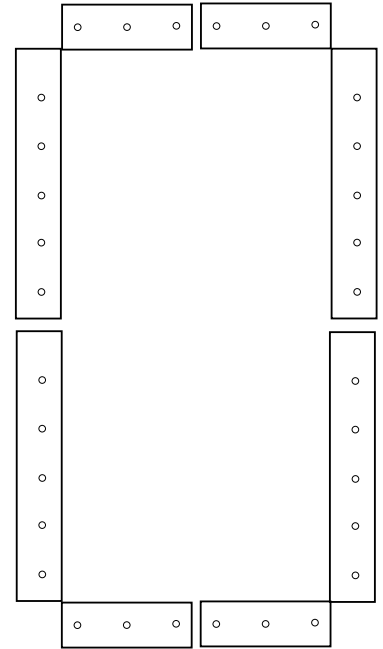

Securing – Face Cap to "L" Cap.

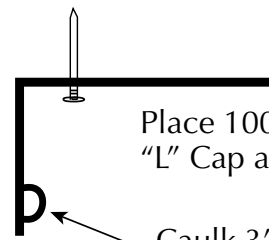

Place 100% silicone caulk on nail side of "L" Cap all around window.

Caulk 3" to 5" strips. Press Face Cap onto caulked "L" Cap



Cut Corner Cap tab to depth needed.



Using 3/16" drill bit drill through cap holes.




Press fit buttons.

NEW!! Pro-Trim® Capping System. Side first...Trim Last. Job gets done...super fast!!

- Eliminates fitting of siding.
- Simplifies all installations – great for shakes Hardiplank, backed siding, U-NAM-IT.
- Authentic Corner Caps install in seconds.
- Exterior and Interior capability.

Plain and Rosette Corner Caps

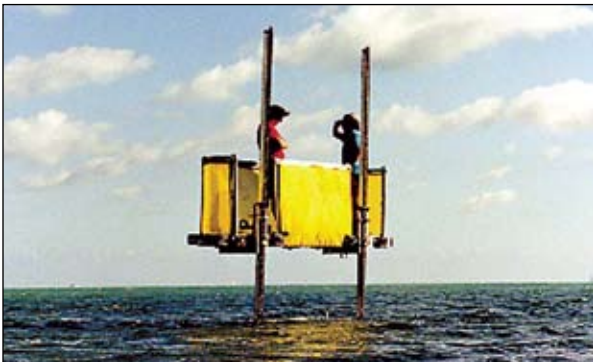


**28 years & over 1,000,000
Alum-A-Poles later...still
improving the industry.**



YOUR SCAFFOLDING, BRAKE AND VINYL COIL ANSWERS!

© 2008 Alum-A-Pole Corporation
Scranton, PA • 800-421-2586 • pro-trim.com
• Patents Issued & others pending

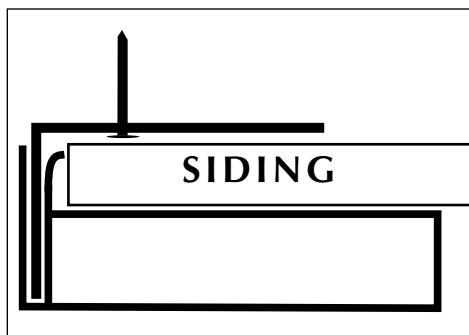

**Your job time will be cut
in half.** Siding can be cut
short. No problem...the
female cap covers all for
a totally professional job
every time.